

Pro-Drag4 250mJ S3 V2.0

ELECTRICAL WIRING & OPERATING INSTRUCTIONS

Applicable S/No's 351028 +

FAILURE TO FOLLOW INSTRUCTIONS WILL VOID WARRANTY

CONTENTS:

- 2. Installation notes
- 5. Connections and specifications
- 6. 4 Coil sequential ignition
- 7. Mounting dimensions

© M&W IGNITIONS

INSTALLATION NOTES

(Pro-Drag4 250mJ Series 3 V2.0)

MOUNTING

Mount the unit in a dry location away from intense heat and ensure bottom condensation slots are unobstructed and oriented to permit gravity drain. Ensure a source of cooling air is available.

Failure to use supplied rubber mounts will void warranty!

IGNITION LEADS

Use inductively suppressed spiral wound metal conductor ignition leads. The use of unsuppressed metal leads may cause electrical interference with ecu and/or ignition system.

Do not use carbon core leads!

SPARK PLUGS

Non resistor spark plugs will greatly enhance ignition performance <u>however</u> some installations will require the use of resistor spark plugs for correct ECU operation.

When using resistor spark plugs measure internal resistance as part of regular maintenance!

Fixed gap surface discharge and semi surface discharge spark plugs are only suitable for naturally aspirated applications.

Keep spark plug gap <= 0.025'' (0.6mm) for boosted motors!

INSULATION PRECAUTIONS

Regularly degrease sparkplug insulators, sparkplug boots, ignition coil boots and installation tooling.

Use dielectric grease on sparkplug insulators and inside sparkplug and ignition coil boots.

POWER SUPPLY

Do not use voltage boosters, if the vehicle contains a PDM <u>use it</u> <u>only to control CDI switch wire</u>.

Connect ignition supply wires directly to battery!

When using a total loss electrical system install a 16V battery to ensure adequate running voltage. Isolate battery when charging.

Reverse polarity connection without recommended fuse installed will damage unit!

<u>WIRING</u>

If required power/ground wire length exceeds recommendations use large paired battery cable (power and ground) to make up distance. Do not rely on vehicle chassis to provide ground path.

Use twisted shielded wire similar to aerospace/mil-spec M27500 series for all power, coil and trigger wires.

Common coil negative wires must be joined at or in the cdi connector.

Keep coil primary wires well separated from HT leads, coil HV outlet, coil body and any ECU wiring!

TRIGGERING

For correct operation trigger voltage relative to CDI ground must rise above 3.2V and fall below 1.6V. Ignition channels may be triggered in any sequence.

This unit defaults to falling (negative) edge trigger. To select rising edge (positive) trigger ground 'Trigger Edge' pin by connecting to pin 10.

If uncertain of correct edge - lock Ecu timing and monitor engine with timing light while changing RPM. Timing should appear stationary.

<u>TUNING</u>

CDI performance is independent of dwell time!

M&W CDI systems typically reduce combustion delay requiring a reduction in timing. The resulting changes in combustion characteristics may also require alterations to fuel flow.

Always set ECU ignition delay to zero and re-tune both fuel and timing curves after installation!

LED INDICATOR

After applying power to input switch wire the LED will illuminate for approximately 1 second then extinguish. It will then flash briefly with each consecutive trigger event received.

A repeated double flash of the LED may indicate a possible faulty ignition coil, faulty wiring, low supply voltage or damage to the CDI.

<u>TESTING</u>

The CDI may be tested by momentarily grounding the trigger inputs which will cause the LED to flash and corresponding ignition coil to spark.

Do not conduct this test without grounded spark plugs installed! Failure to heed this may result in damage to the cdi and/or coils!

COIL SELECTION

Use of inductive ignition coils with cdi ignition will limit output energy, for ultimate performance use coils specifically designed for CDI use such as the M&W #COI006. Wire inductive coils reverse polarity when used with M&W CDI's.

The use of COP/Pencil coils of any brand or type will void warranty!

Do not use ferrite coils from Mercury or MSD!

Do not use Prufex brand coils under any circumstances!





